



Sauter GmbH

Instruction Manual / Data sheet

CT Q1

V. 1.0
12/2018
EN



PROFESSIONAL MEASURING

CT Q1-BA-e-1810



SAUTER CT Q1

V. 1.0 12/2018

Instruction Manual / Data sheet

Summarize:

| | | |
|------------|---|----------|
| 1 | Short description | 3 |
| 2 | Available models..... | 3 |
| 3 | Introduction..... | 3 |
| 4 | Warning notes | 3 |
| 5 | Warranty | 4 |
| 6 | Detailed specifications | 4 |
| 7 | Wiring..... | 4 |
| 8 | Dimensions in mm..... | 5 |
| 8.1 | Dimensions in mm (300kg -5000kg) | 5 |
| 8.2 | Dimensions in mm (7500kg -10000kg) | 5 |
| 9 | Certificate of Compliance..... | 5 |

1 Short description

- Stainless steel IP68 (acc. to EN 60529) / IP69K (acc. to ISO 20653) shear beam load cell
- Suitable platform, hopper, bed and other weighing devices in raw environment
- hermetically sealed
- Accuracy OIML R60 C3
- OIML certificated
- RoHS conform
- Option on request: EX

2 Available models

| Capacity | Model |
|----------|--------------|
| 300kg | CT 300-3Q1 |
| 500kg | CT 500-3Q1 |
| 750kg | CT 750-3Q1 |
| 1000kg | CT 1000-3Q1 |
| 1500kg | CT 1500-3Q1 |
| 2000kg | CT 2000-3Q1 |
| 3000kg | CT 3000-3Q1 |
| 5000kg | CT 5000-3Q1 |
| 7500kg | CT 7500-3Q1 |
| 10000kg | CT 10000-3Q1 |

3 Introduction

Please pay attention to the notes of the operating manual: read these operating manual carefully before commissioning, even if you already have experience with SAUTER measuring cells.

After receiving the measuring cell, it should be checked in advance whether no transport damage has occurred, whether the outer packaging or other parts or even the article itself has been damaged. If any damage is evident, please inform SAUTER GmbH immediately.

4 Warning notes

Observe the national accident prevention regulations.

Not correct executed use of the measuring cell can lead to serious injuries, death, material damage and personal injuries. Use only by trained and experienced people. Never load more than the max. capacity to a measuring cell. Overloaded measuring cells no longer have the required accuracy. Overloaded or deformed measuring cells are no longer allowed to use and must be changed quickly.

Never step under suspended loads.

Always fasten overload- or break security to your construction.

Pay attention to the allowed static and dynamic loads of the used equipment.

Let the measuring cells calibrate at regular intervals.

Only load the measuring cell in its specified load direction. Avoid lateral forces.

Control the measuring cells to deformations and cracks.

Measuring cells with 4-Conductor cable will change their characteristic value when shortened or extended the cable length.

5 Warranty

The warranty expires at:

- Disregard of the specifications of the operating manual
- Modification or opening the measuring cell
- Overload
- Mechanical damages
- Damage caused by liquids or media
- Natural loss
- Not correct installation

6 Detailed specifications

| | | |
|--|-----------------|--|
| Output sensitivity (FS) | mV/V | 2.0 ± 0.001 |
| Maximum capacity (Emax) | kg | 300, 500, 750, 1000, 1500, 2000, 3000, 5000, 7500, 10000 |
| Max.number of load cell intervals | nLC | 3000 |
| Ratio of min. LC verification interval | Y = Emax / vmin | 10000 |
| Combined Error | %FS | ≤± 0.017 |
| Minimum dead load | Of Emax | 0% |
| Safe overload | of Emax | 150 % |
| Ultimate overload | of Emax | 200 % |
| Zero balance | of FS | < ± 2.0 % |
| Excitation, recommended voltage | V | 10 ~ 15 |
| Input resistance | Ω | 400 ± 20 |
| Output resistance | Ω | 350 ± 3 |
| Insulation resistance | MΩ | ≥5000 (at 50VDC) |
| Compensated temperature | °C | -10 ~+40 |
| Operating temperature | °C | -35 ~ +65 |

7 Wiring


Shielded, 6 cable. Shield not connected to element.

Cable diameter: Ø6mm.

Standard cable length for 300kg – 5000kg: 5m


Standard cable length for 7500kg – 10000kg: 10m

6-wire diagram

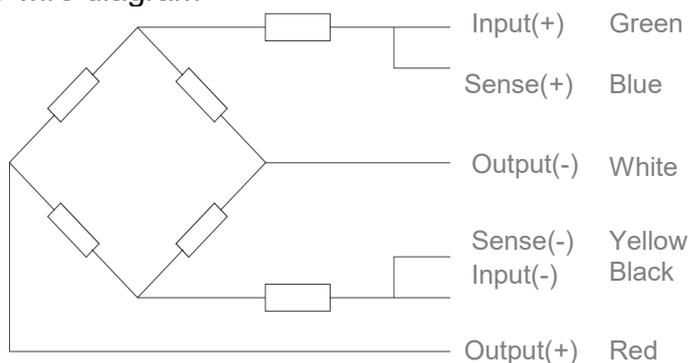


8 Dimensions in mm

8.1 Dimensions in mm (300kg -5000kg)

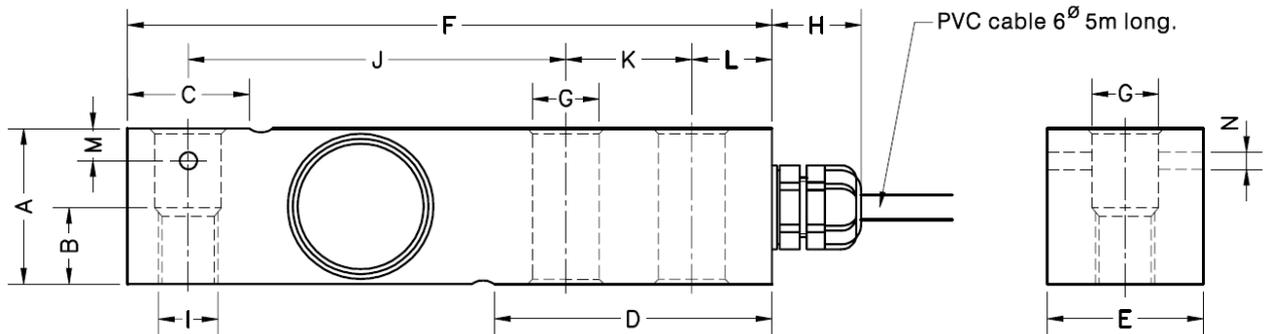

| Dimension Capacity | A | B | C | D | E | F | G Ø | H | I | J | K | L | M | N Ø |
|--------------------|------|----|------|----|------|-------|------|----|------|------|------|------|-----|-----|
| 300kg – 2000kg | 31,5 | 15 | 24,6 | 56 | 31,5 | 130 | 13,5 | 18 | M12 | 76,2 | 25,4 | 15,8 | 6,5 | 3,5 |
| 3000kg -5000kg | 48 | | 37 | 79 | 41,5 | 171,5 | 20,5 | 18 | 20,5 | 95,2 | 38,1 | 19 | | |

8.2 Dimensions in mm (7500kg -10000kg)

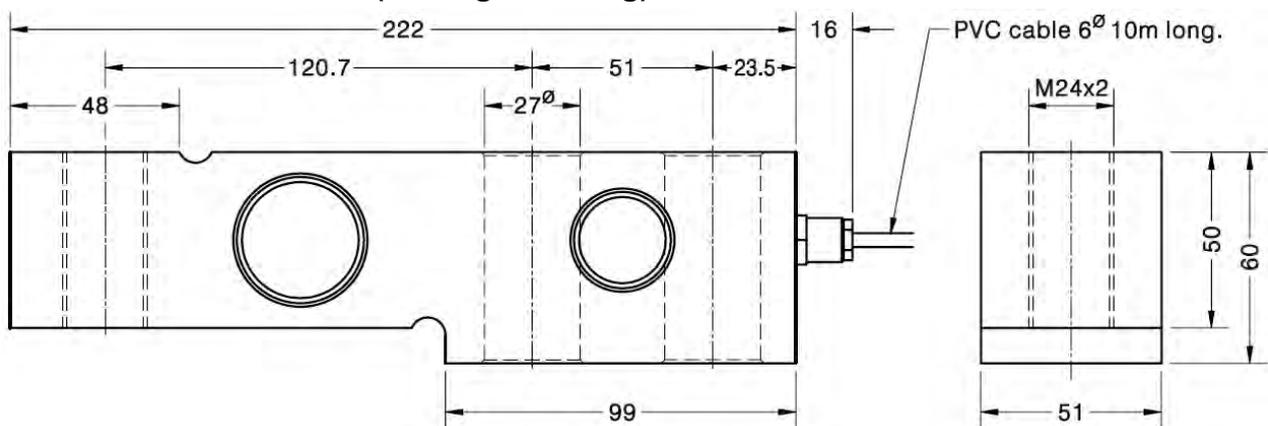

9 Certificate of Compliance

The Certificate of Compliance can be downloaded from the website www.sauter.eu