



KERN & Sohn GmbH

Installation instructions

Pit frame

**KERN BFN-A06 / BFN-A02 /
BFS-A03N / BFS-A04N /
BFS-A08N**

Version 2.5

2024-08

GB



BFN-A06_BFN-A02_BFS-A03N_BFS-A04N_BFS-A08N-IA-e-2425



KERN BFN-A06 / BFN-A02 / BFS-A03N / BFS-A04N / BFS-A08N

Version 2.5 2024-08

Installation instructions Pit frame

Contents

1	Basic safety instructions.....	2
1.1	Follow the instructions in the documentation.....	2
1.2	Staff training	2
1.3	Unpacking and checking	2
1.4	Installation	3
1.4.1	Select installation location	3
1.4.2	Make a pit	4
1.4.3	Insert pit frame	6
1.4.4	Setting the pit frame in concrete	8
1.5	Place the weighing platform on the pit frame.....	9
2	Drawings.....	10

1 Basic safety instructions

1.1 Follow the instructions in the documentation



⇒ Read the document carefully before installation.

1.2 Staff training

The product may only be installed by qualified specialists using suitable fastening materials.

1.3 Unpacking and checking

Remove the product from the packaging and remove the packaging material. Check that all parts included in the scope of delivery are present and undamaged.

Scope of delivery / standard accessories:

- Pit frame
- 8x screws (M12) and 8x nuts (M12)
- Installation instructions

1.4 Installation

INFORMATION




- The necessary preparatory work is described in the relevant installation instructions for the weighbridge.

1.4.1 Select installation location


The pit frame must be installed in a suitable location.

- Do not install near doors
- Do not install in heavily frequented areas
- Weighing bridge must be protected from strong air movements
- Weighbridge must be protected from shocks and vibrations

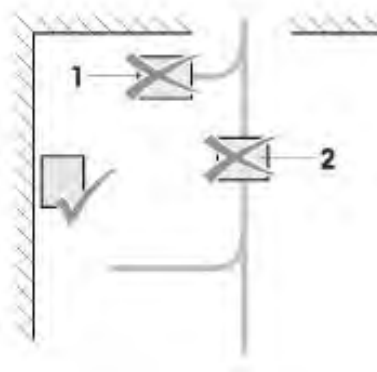

When selecting the installation location, also consider the subsequent position of the weighing platform indicator.

- Do not install directly behind or next to the weighbridge
- Position the display unit so that it is easy to operate and read
- Note the length of the connecting cable between the indicator and the weighing platform

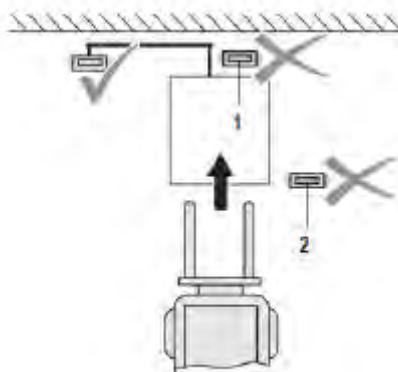


1.4.2 Make a pit

NOTE



⇒ For wet operation, drainage must be provided and the pit must be designed as a wet pit. Further information on creating a wet pit can be found on the next page.


1. Make a pit for the corresponding pit frame.

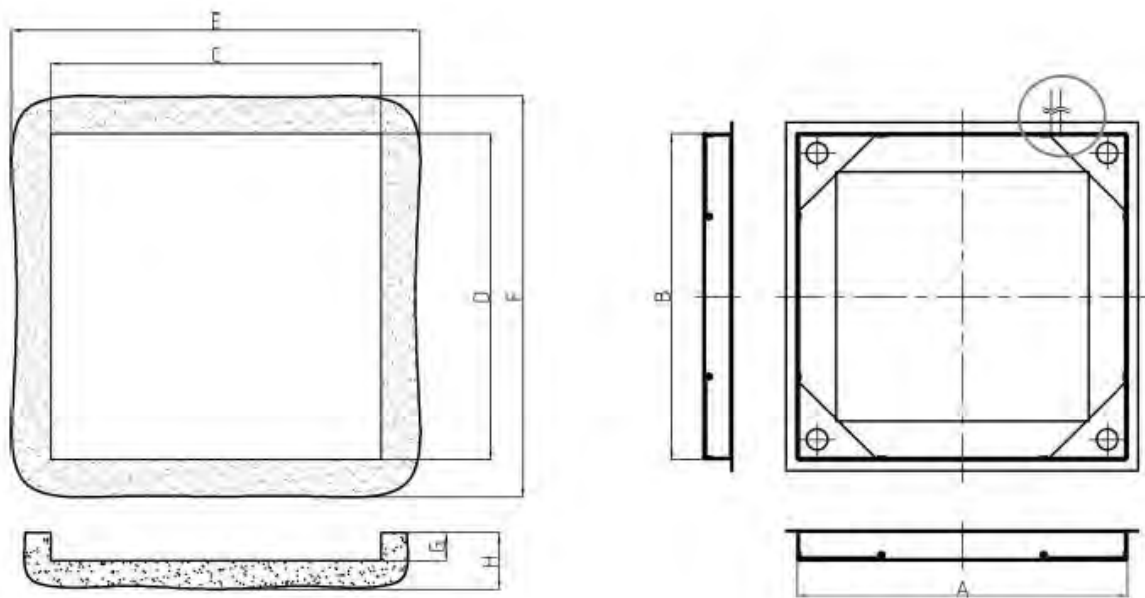

Type	Pit frame		Quick Pit			Raw pit		
	A	B	C	D	G	E	F	H
BFN-A06	1020	1020	1050	1050	90	1250	1250	150
BFN-A02	1270	1520	1300	1550	90	1500	1750	150
BFS-A03N	1020	1020	1050	1050	90	1250	1250	150
BFS-A04N	1270	1520	1300	1550	90	1500	1750	150
BFS-A08N	1520	1520	1550	1550	90	1750	1750	150

2. Make a slot for the cable outlet. This must be at least 100 mm wide so that the cable cover screws can still be reached.

Note: When making the cable outlet, pay attention to the later positioning of the display unit. Only this position will be possible later.

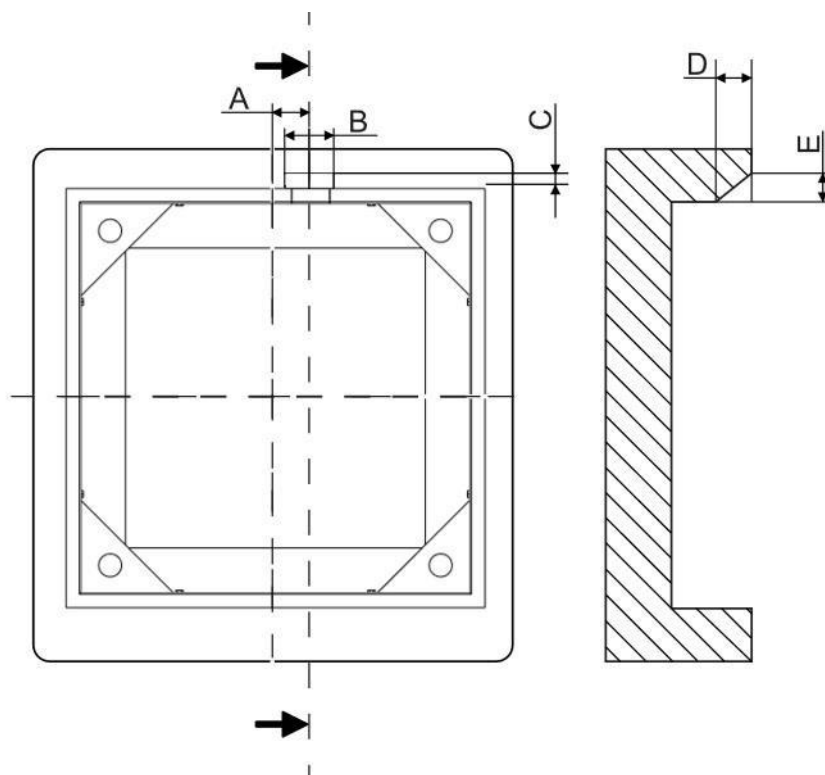


A	B	C	D	E
92	min. 100	min. 50	min. 50	min. 90

Instructions for creating a wet pit:


NOTE



⇒ The wet pit with drainage must be adapted to the ambient conditions. The wet pit may therefore only be installed by specialised personnel who have the necessary qualifications.

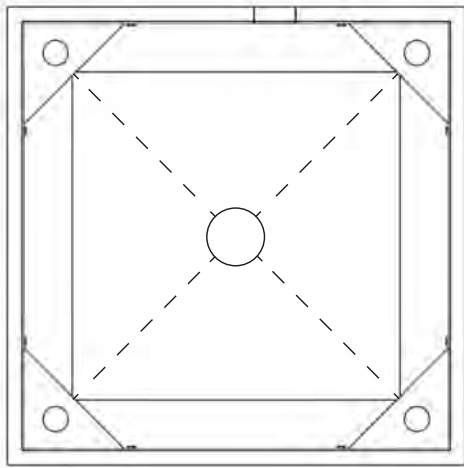


- The gradient **A** must be at least 4 %
- The wet pit must be constructed in such a way that the frame of the pit frame can still stand on solid ground

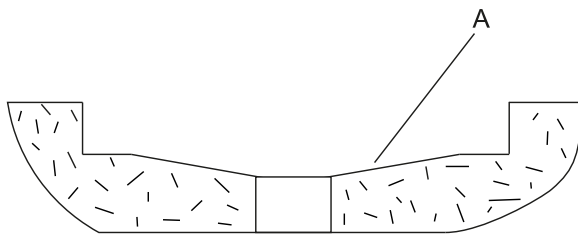


1.4.3 Insert pit frame

1. Ensure that the pit frame is square.

The pit frame is right-angled if the two diagonals have the same length. The tolerance is ± 2 mm. If there are larger deviations, the pit frame must not be set in concrete.

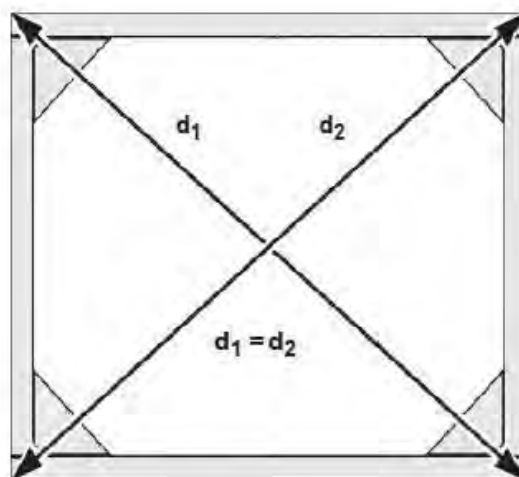


2. Prepare the cable outlet.

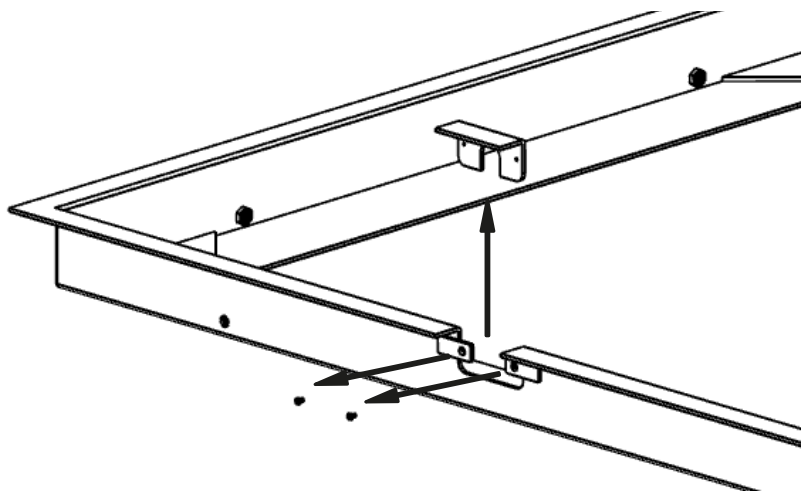


3. Place the pit frame in the pit.

4. Secure the pit frame with the 8 screws. The screws must touch the pit.

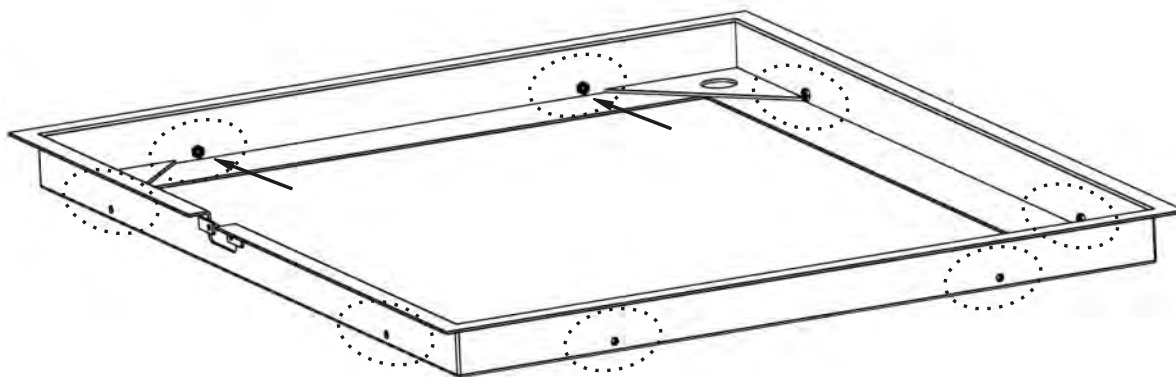

5. Level the pit frame precisely and secure with the 8 nuts. Only precisely levelled pit frames guarantee the best weighing results.

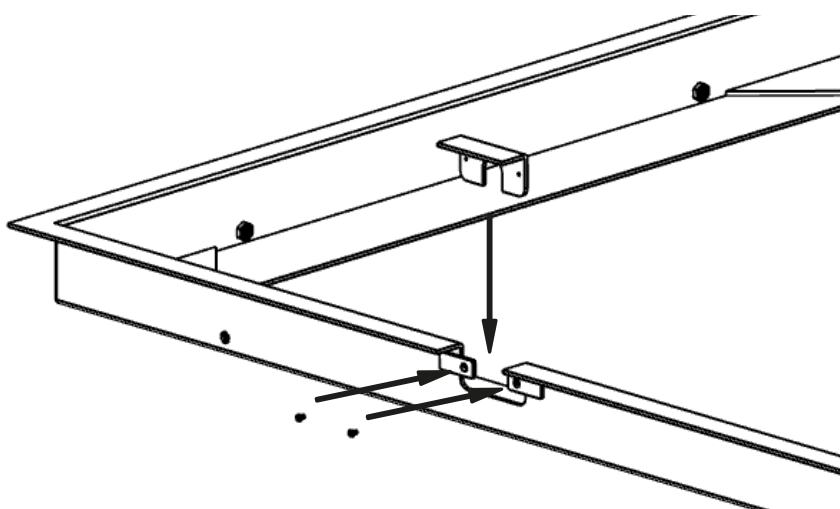


1.4.4 Setting the pit frame in concrete

- 1.** Set the pit frame in concrete according to the specifications of an architect or structural engineer.
- 2.** Allow the concrete to harden in accordance with the concrete manufacturer's specifications.
- 3.** If there is moisture in the surrounding area, seal the masonry with a suitable material.


1.5 Place the weighing platform on the pit frame

- ⇒ Place the weighing platform with the levelling feet on the recesses of the base plates in the pit frame. Then proceed as described in the relevant installation instructions for the weighbridge.



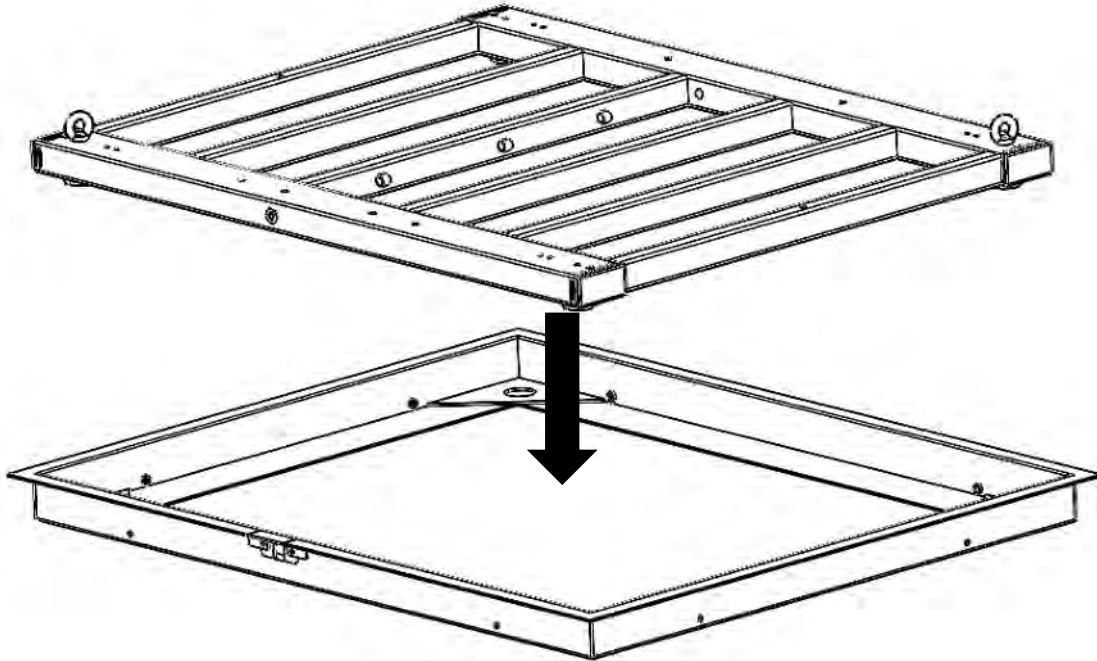


2 Drawings



Drawings at the end of the document

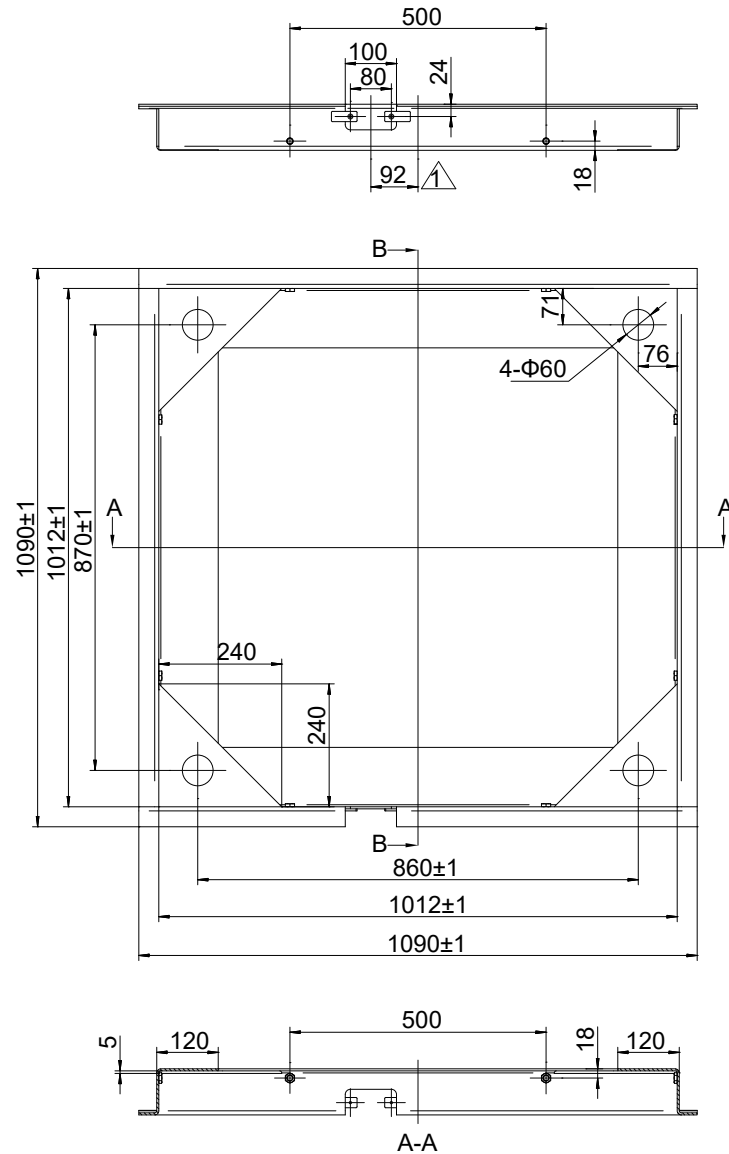


REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

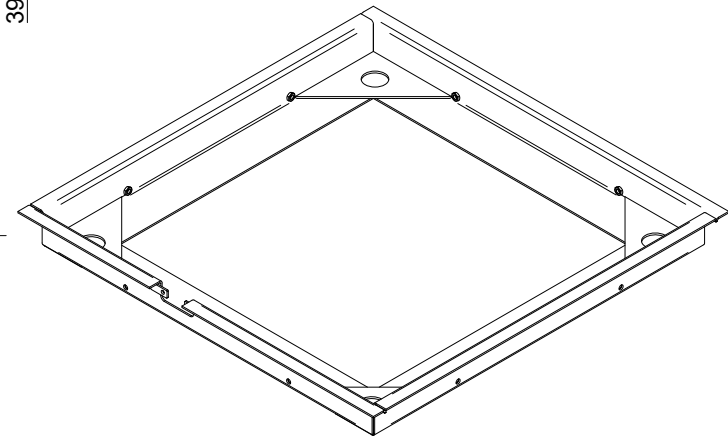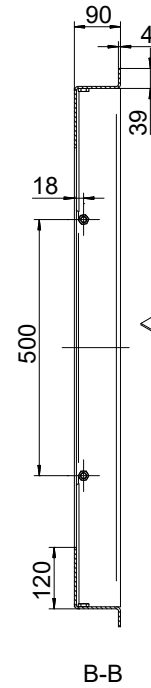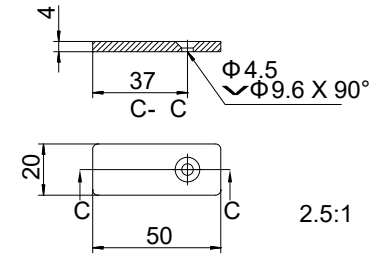

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		±0.5		KERN® KERN & SOHN GmbH	
3RD ANGLE PROJECTION		TITLE:		BFN-A06	
DRAWN	Y.J.Zhao	MODEL NO.		FMS1010-KERN	PART NO.
CHECKED	Tim.Zhao	MATERIAL			FINISH
APPROVED	Tim.Zhao	SCALE			DO NOT SCALE DRAWING
UNIT	mm	SHEET OF		130901200053	

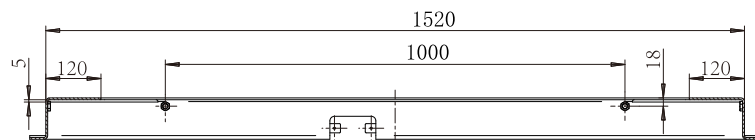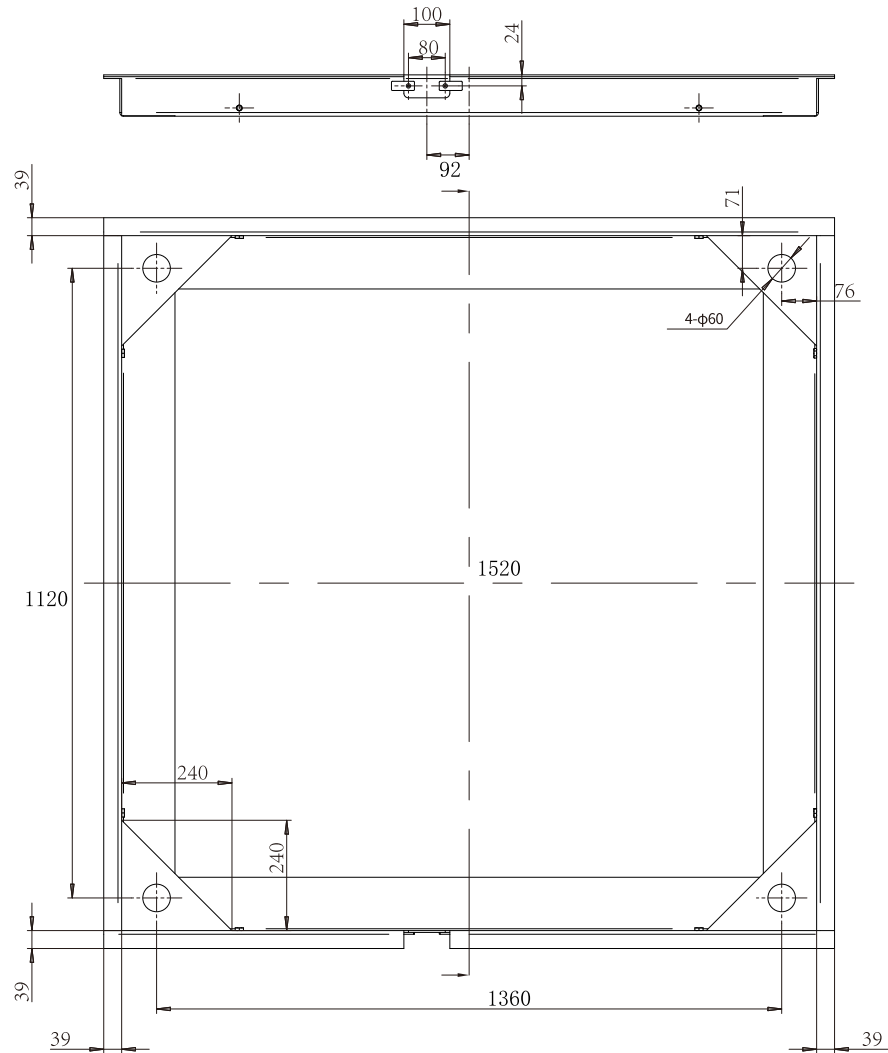



A-A

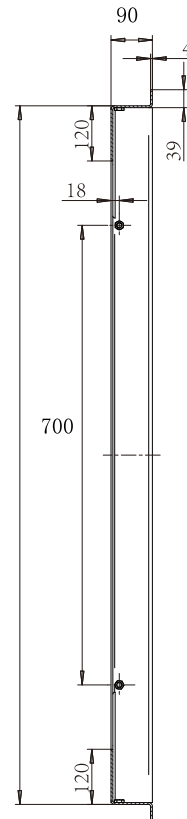

B-B





REVISIONS

ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

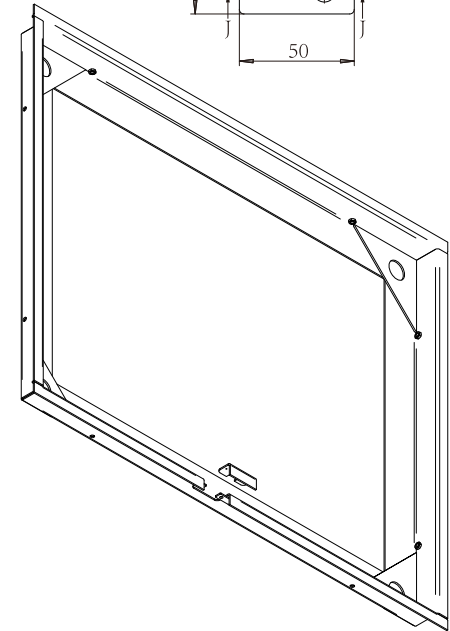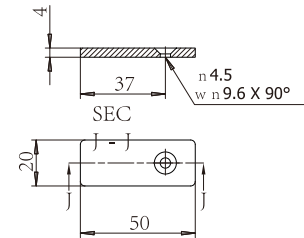

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.5 ±0.1 FOR 0.X ±0.05 FOR 0.XX		KERN® KERN & SOHN GmbH			
3RD ANGLE PROJECTION		TITLE: BFN-A02			
DRAWN	YJ.Zhao	MODEL NO.	FMS12515-KERN	PART NO.	130901200014
CHECKED	Tim.Zhao	MATERIAL		FINISH	
APPROVED	Tim.Zhao	SCALE		DO NOT SCALE DRAWING	SHEET OF
UNIT	mm				


A4

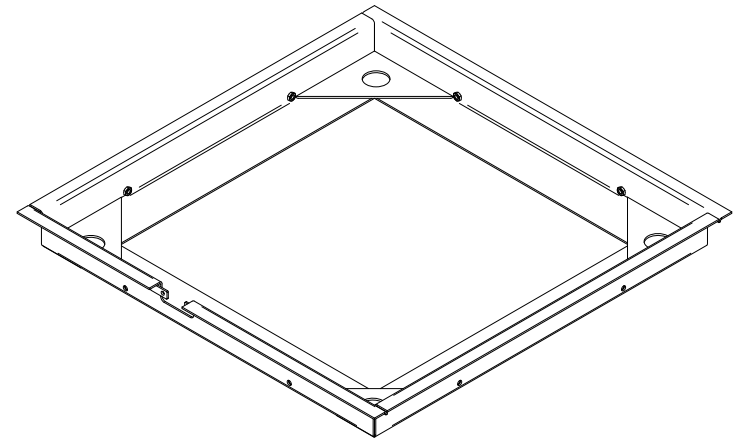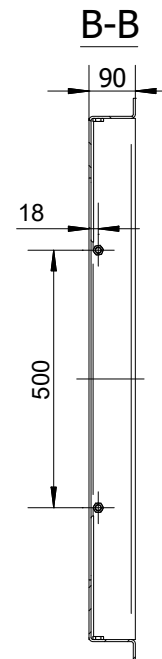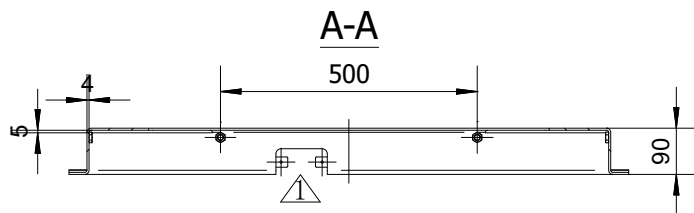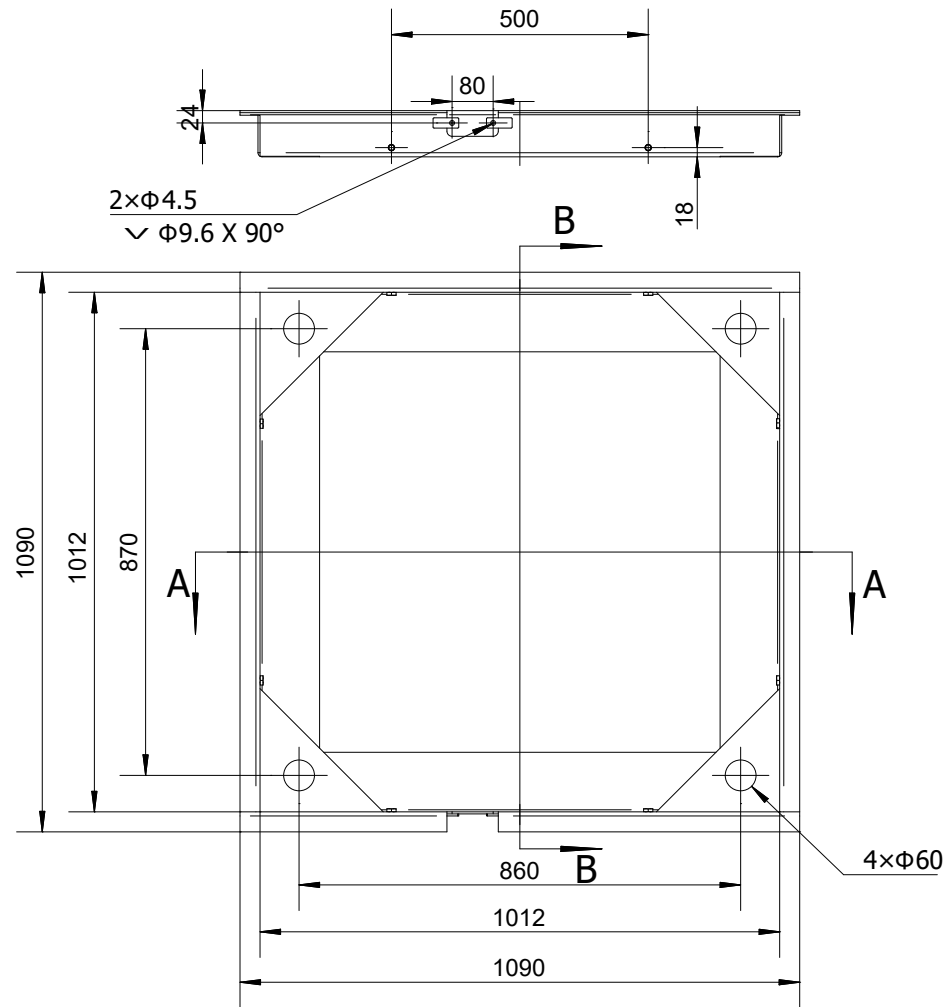




REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.5 ±0.05 FOR 0.XX		<i>KERN® KERN & SOHN GmbH</i>			
 3RD ANGLE PROJECTION		TITLE: BFS-A03N			
DRAWN	Y.J.Zhao				
CHECKED	Tim.Zhao	MODEL NO.	FM1010-KERN	PART NO.	130901200043
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE		DO NOT SCALE DRAWING	SHEET OF


A4

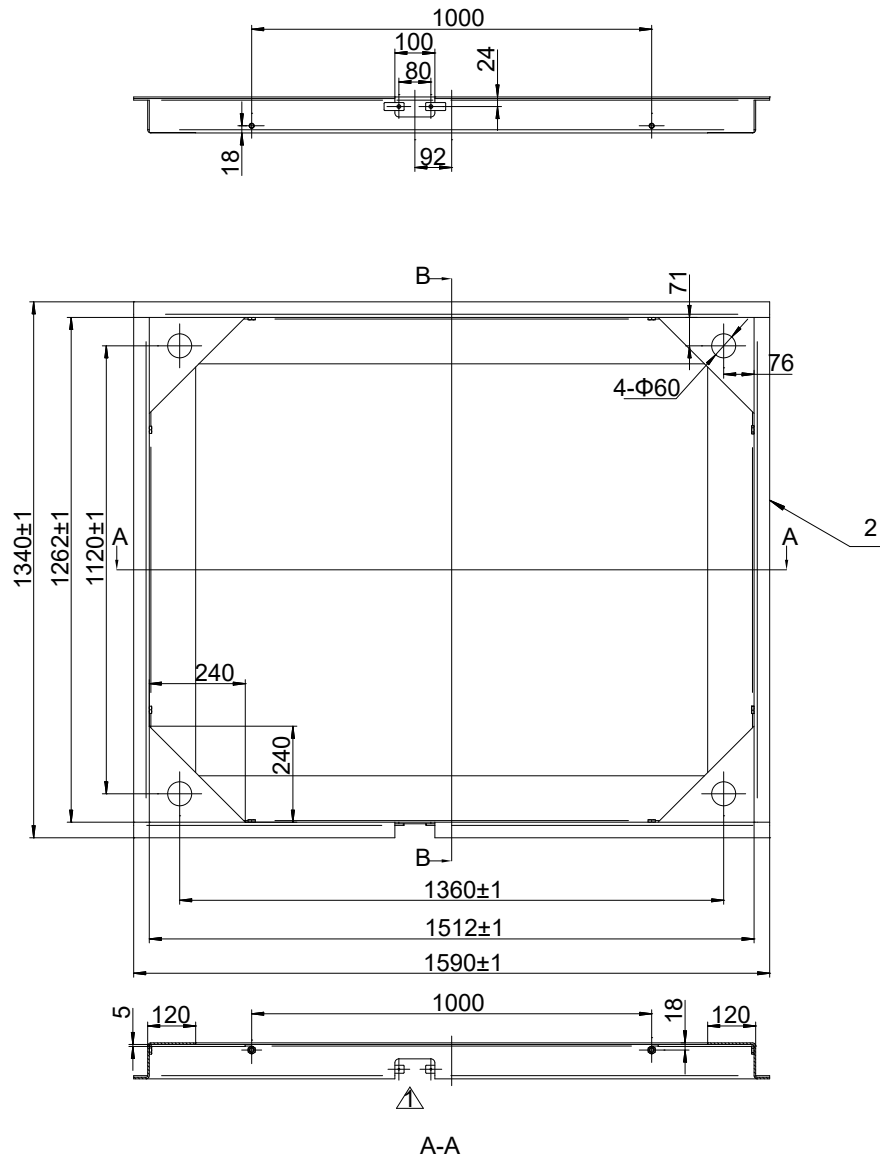


REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

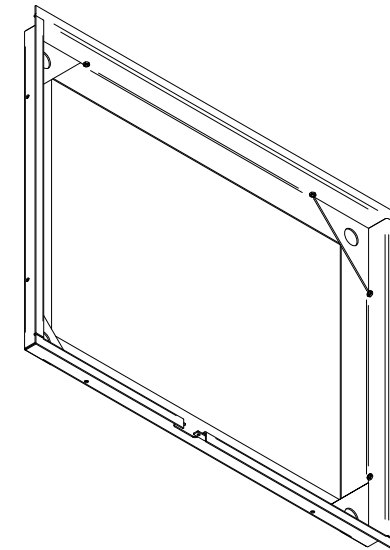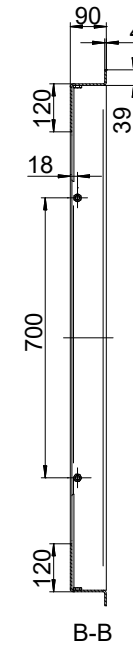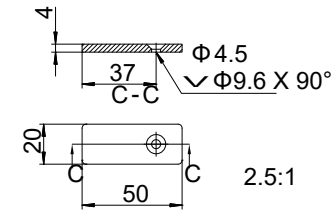

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		±0.5	KERN® KERN & SOHN GmbH			
3RD ANGLE PROJECTION		TITLE:		BFS-A04N		
DRAWN	Y.J.Zhao	MODEL NO.		FM12515-KERN	PART NO.	130901200044
CHECKED	Tim.Zhao	MATERIAL			FINISH	
APPROVED	Tim.Zhao	UNIT		mm	SCALE	DO NOT SCALE DRAWING
						SHEET OF

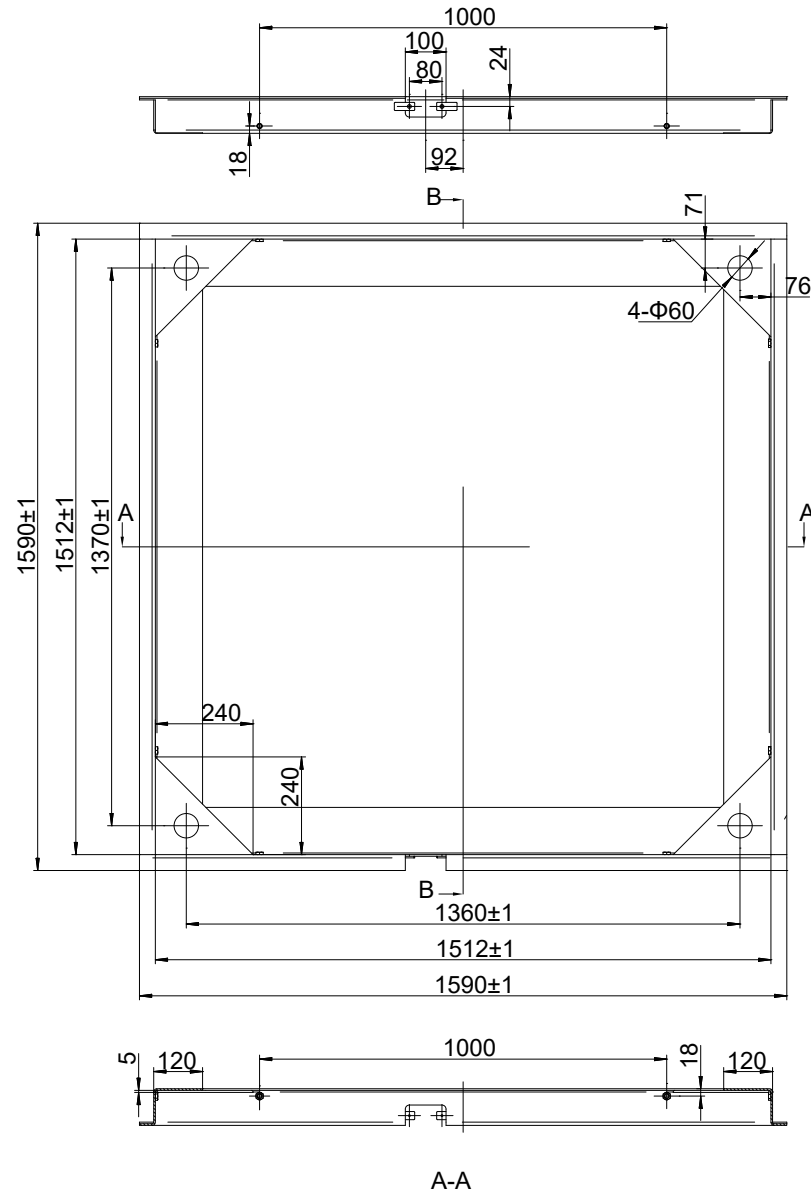

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

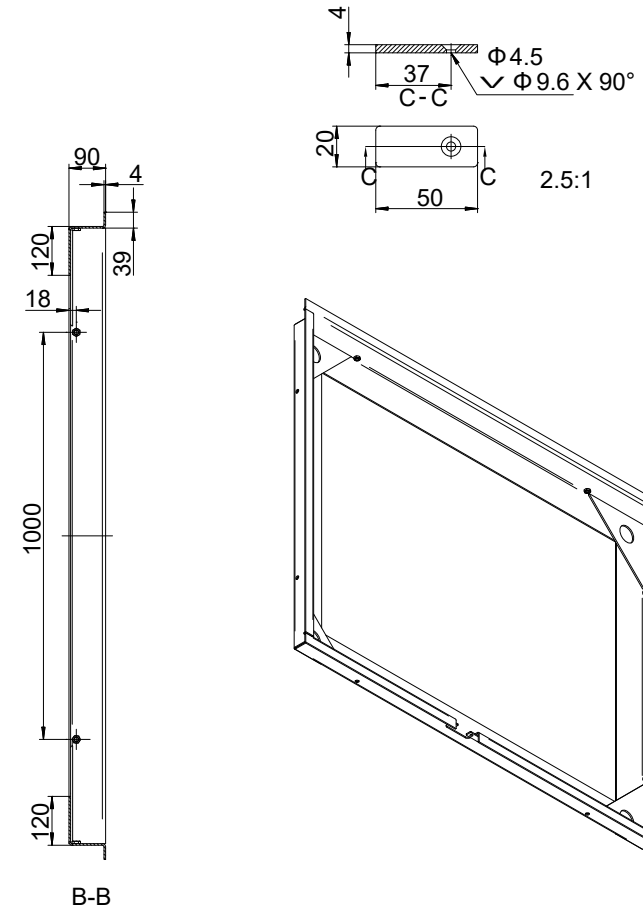

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		±0.5	<i>KERN® KERN & SOHN GmbH</i>			
 3RD ANGLE PROJECTION			TITLE:	BFS-A08N		
DRAWN	Y.J.Zhao					
CHECKED	Tim.Zhao	MODEL NO.	FM1515-KERN	PART NO.	130901200045	
APPROVED	Tim.Zhao	MATERIAL		FINISH		
UNIT	mm	SCALE		DO NOT SCALE DRAWING		SHEET OF