

Price computing scale KERN RIB



Robust retail scale with large item memory, user-friendly handling and EC type approval [M]

Features

- **1** KERN RIB-HM: Elevated display backlit, height of stand approx. 405 mm
- **2** KERN RIB-M: Second display on the back of the balance
- Three displays for weight display (verifiable), unit price, total price
- 10 direct price keys for frequently recurring article prices
- Memory (PLU) for 20 article prices
- Energy management: Backlight turns off after 5 sec, can be switched off
- Soil-resistant construction through water channels at the frame of the housing and sealing rings over the upper housing inlets
- Protective working cover included with delivery

Technical data

- Large backlit LCD displays, digit height 18 mm
- Weighing plate dimensions, stainless steel, WxD 294x225 mm
- Overall dimensions WxDxH
KERN RIB-M: 325x340x115 mm
KERN RIB-HM: 325x340x405 mm
- Net weight
KERN RIB-M: approx. 3,2 kg
KERN RIB-HM: approx. 3,8 kg
- Permissible ambient temperature -10 °C/40 °C

Accessories


- Protective working cover, scope of delivery 5 items, KERN RIB-A01S05
- Internal rechargeable battery pack, operating time up to 80 h without backlight, charging time approx. 14 h, KERN GAB-A04
- **3** Tare pan made from stainless steel, overall dimensions WxDxH, 400x300x45 mm, KERN RFS-A02

Application examples

- retail shops
- weekly markets
- farm shops
- pick your own fruit and vegetable sales

Note: Official verification is mandatory for commercial trade

STANDARD

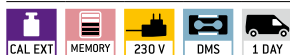

OPTION



FACTORY



Model	Weighing capacity	Readability	Verification value	Minimal load	Verification	Option DAkkS Calibr. Certificate
KERN	[Max] kg	[d] g	[e] g	[Min] g	KERN	DAkkS KERN
Multi-range balance, with increasing load it switches automatically to the next largest weighing range [Max] and readout [d] and when the load is fully removed, the balance switches back to the lower range						
RIB 6K-3M	3 6	1 2	1 2	20 40	965-228	963-128
RIB 10K-3M	6 15	2 5	2 5	40 100	965-228	963-128
RIB 30K-2M	15 30	5 10	5 10	100 200	965-228	963-128
with elevated display						
RIB 6K-3HM	3 6	1 2	1 2	20 40	965-228	963-128
RIB 10K-3HM	6 15	2 5	2 5	40 100	965-228	963-128
RIB 30K-2HM	15 30	5 10	5 10	100 200	965-228	963-128

Note: For applications that require verification, please order verification at the same time, initial verification at a later date is not possible.
Verification at the factory, we need to know the full address of the location of use.



Internal adjusting:

Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)



Adjusting program CAL:

For quick setting up of the balance's accuracy. External adjusting weight required



Easy Touch:

Suitable for the connection, data transmission and control through PC or tablet.



Memory:

Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.



Alibi memory:

Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard.



KERN Universal Port (KUP):

allows the connection of external KUP interface adapters, e.g. RS-232, RS-485, SB, Bluetooth, WLAN, Analogue, Ethernet etc. for the exchange of data and control commands, without installation effort



Data interface RS-232:

To connect the balance to a printer, PC or network



RS-485 data interface:

To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible



USB data interface:

To connect the balance to a printer, PC or other peripherals



Bluetooth* data interface:

To transfer data from the balance to a printer, PC or other peripherals



WiFi data interface:

To transfer data from the balance to a printer, PC or other peripherals



Control outputs

(optocoupler, digital I/O):

To connect relays, signal lamps, valves, etc.



Analogue interface:

to connect a suitable peripheral device for analogue processing of the measurements



Interface for second balance:

For direct connection of a second balance



Network interface:

For connecting the scale to an Ethernet network



KERN Communication Protocol (KCP):

It is a standardized interface command set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems



GLP/ISO log:

The balance displays weight, date and time, independent of a printer connection



GLP/ISO log:

With weight, date and time. Only with KERN printers.



Piece counting:

Reference quantities selectable. Display can be switched from piece to weight



Recipe level A:

The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out



Recipe level B:

Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display



Totalising level A:

The weights of similar items can be added together and the total can be printed out



Percentage determination:

Determining the deviation in % from the target value (100 %)



Weighing units:

Can be switched to e.g. nonmetric units. See balance model. Please refer to KERN's website for more details



Weighing with tolerance range:

(Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model



Hold function:

(Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value



Protection against dust and water splashes IPxx:

The type of protection is shown in the pictogram.



Suspended weighing:

Load support with hook on the underside of the balance



Battery operation:

Ready for battery operation. The battery type is specified for each device



Rechargeable battery pack:

Rechargeable set



Universal plug-in power supply:

with universal input and optional input socket adapters for

A) EU, CH, GB

B) EU, CH, GB, USA

C) EU, CH, GB, USA, AUS



Plug-in power supply:

230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available



Integrated power supply unit:

Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request



Weighing principle: Strain gauges

Electrical resistor on an elastic deforming body



Weighing principle: Tuning fork

A resonating body is electromagnetically excited, causing it to oscillate



Weighing principle: Electromagnetic force compensation

Coil inside a permanent magnet. For the most accurate weighings



Weighing principle: Single cell technology:

Advanced version of the force compensation principle with the highest level of precision



Verification possible:

The time required for verification is specified in the pictogram



DAkkS calibration possible (DKD):

The time required for DAkkS calibration is shown in days in the pictogram



Factory calibration (ISO):

The time required for Factory calibration is shown in days in the pictogram



Package shipment:

The time required for internal shipping preparations is shown in days in the pictogram



Pallet shipment:

The time required for internal shipping preparations is shown in days in the pictogram